

FT-60



press the [0 Set] key

FT-1500 and ft-1900



press The [L] Key

Ft-2900



press the [L] key

Ft-8800 ft-8900



Press the LEFT volume knob

VX-170 & VX-177 1. Press the F/M key then immediately press the 0 key to enter the menu mode. -See manual page 48 2. Rotate the Dial knob to menu 24 – INT MR. 3. Press the F/M key then rotate the Dial knob to select a memory (d1 through d9) that is empty, i.e. it contains •••••• (six dots) = no tone. 4. Press the F/M key to store the setting. 5. Rotate the Dial knob to menu 22 – I NET. 6. Press the F/M key then rotate the Dial knob to select INT.MEM. 7. Press the F/M key to store the setting. 8. Press the PTT button to exit the menu mode.

VX-7R

On the **VX-7R**, the key that is used to turn on wires is in the lower left hand corner of the pad, next to the "7" key. It is the "TX PO LK" key and looks like this:

This is the *same* key used to lock and unlock the key pad!

TX PO LK

This is the *same* key used to lock and unlock the key pad!

Bottom Left Key, to left of "7"

If you hold the key for 2 seconds, it locks the

If you hold the key for 2 seconds, it locks the key pad. If you press it just once (or accidentally touch it while holding the radio), it turns wires ON.

You can tell wires is enabled if you look at the top left of your display and see the following symbol:



In the **VX-7R** manual, page 67:

"With the Internet Connection feature activated [...], the **VX-7R** will generate a brief (0.1 second) DTMF tone according to your selection in step 2. This DTMF tone is sent at the beginning of every transmission to establish or maintain the link to the remote **WIRES™** repeater."